

Recommended printer settings

日本の型番 PX-5002/PX-6500 PX-7550/9550/20000 PX-H7000/9000 PX-5600/PX-5V PX-H6000 PX-H8000 PX-H10000 PX-G5000,5100 PX-G900,920 PX-G5300 SC-PX5V II SC-PX3V SC-P7050G SC-P8050G

	Epson						Canon			HP
Printer	SP 3880 / 4880 / 7880 / 9880 / 11880 / 7890 / 9890 / R 2880 / R 3000	SP 4900 / 7900 / 9900	SP R800 / 1800 / R 1900	SC P 600 / 800	SC P 7000 / 8000	SP 1500 W	iPF 5000 / 8000 / 9000 / 5100 / 6100 / 8100 / 9100 / 6200 / 8200 6300 / 8300 / 6400 / 8400 / 1000	Pixma Pro 9500 / 1 / 10	Pixma Pro 9000 / 100	Photosmart B9180 / B8850 DJ 2100 / DJ 3100 / DJ 3200 / DJ 5200 / DJ 6100 / DJ 6200 DJ 5400 / DJ 6800
Ink	Ultrachrome K3 Vivid Magenta	Ultrachrome HDR	Ultrachrome High-Gloss / 2	Ultrachrome HD	Ultrachrome HDX	Claria (Dye)	Lucia / EX / Pro	Lucia	Dye	Vivera
Mediatype	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	HW Gloss Photo Paper	HW Gloss Photo Paper	Photo Paper Plus Glossy	HP Advanced Photo Paper Glossy
Setting	Photo	Photo	Best Photo	Quality	Quality	Photo	Highest	Highest	High	Best
Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
Mediatype	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	HW Gloss Photo Paper	HW Gloss Photo Paper	Photo Paper Plus Glossy	HP Advanced Photo Paper Glossy
Setting	Photo	Photo	Best Photo	Quality	Quality	Photo	Highest	Highest	High	Best
Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
Mediatype	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	HW Satin Photo Paper	HW Satin Photo Paper	Photo Paper Plus Semigloss	HP Professional Photopaper Semimatt
Setting	Best Photo	Best Photo	Best Photo	Quality	Quality	Best Photo	Highest	Highest	High	Best
Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
Mediatype	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	HW Satin Photo Paper	HW Satin Photo Paper	Photo Paper Plus Semigloss	HP Professional Photopaper Semimatt
Setting	Best Photo	Best Photo	Best Photo	Quality	Quality	Best Photo	Highest	Highest	High	Best
Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
Mediatype	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	HW Semigloss Photo Paper	HW Semigloss Photo Paper	Photo Paper Plus Semigloss	HP Advanced Photo Paper Glossy
Setting	Photo	Photo	Best Photo	Quality	Quality	Best Photo	Highest	Highest	High	Best
Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
Mediatype	Archival Matte Paper	Archival Matte Paper	Epson Archival Matte Paper	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Professional Photo Paper	Canvas
Setting	Photo	Photo	Photo	Quality	Quality	Photo	High	High	High	Best
Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
Mediatype	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Velvet Fine Art Paper	Velvet Fine Art Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art "Photo Rag"	Other FineArt Paper
Setting	Photo	Photo	Photo	Quality	Quality	Photo	High	High	High	Best
Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
Mediatype	Watercolor Paper	Water color Paper	Epson Archival Matte Paper	Velvet Fine Art Paper	Velvet Fine Art Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art "Photo Rag"	Other FineArt Paper
Setting	Photo	Photo	Photo	Quality	Quality	Photo	High	High	High	Best
Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK

PK = Photo Black, MK = Matt Black

Please Note: Settings are only for original printer drivers. If you use our RGB-ICC-Profiles, the settings may be different. Please refer to profile recommendations.